

AEOLUS


Professional Pet Drying Equipments Supplier




AEOLUS

Aluminum Portable Trolley


KB-511/513/514

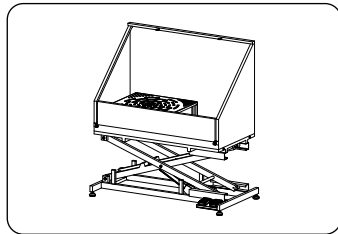


BTS-132TE

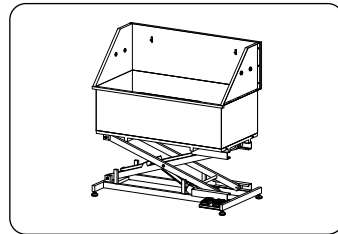

BTS-136E

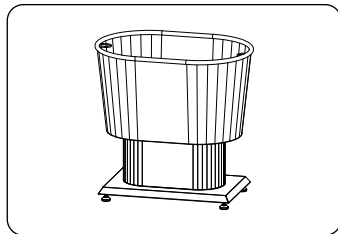

BTS-161

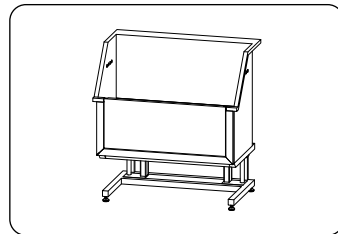

BTS-139E

Distributor Contacts



AEOLUS

DALLAS

11307 Indian Trail, Dallas, Texas 75229, USA.
Tel: +1 469 930 6359

SHANGHAI

Floor 5, Building 6, No. 675, Zhujin Road, Songjiang District, Shanghai, China.
Tel: +86-21-67632060, 67632364



New
Generation

User Manual

Overview

Pro *for* Pros



- | | |
|-------------------------------|------------------------------|
| 1. Top panel | 8. Horizontal divider |
| 2. Top panel security clip | 9. Divider holder |
| 3. Wire wall | 10. Fold down handle |
| 4. Door | 11. Rubber border protector |
| 5. Double door locking system | 12. Casters with brake |
| 6. Bottom panel | 13. Trolley shade (optional) |
| 7. Vertical divider | |

Brief Introduction

Our world renowned trolley is a must have for all your dog show needs. This multi-faceted trolley can act as a cage, grooming table, work table, luggage cart, pet carrier, transporter, and more. It is made out of heavy-duty aluminum parts, rust resistant, durable, strong, and resilient in even the roughest of conditions. You will be impress with how light-weight and easy to clean this trolley. It is made from 100% aluminum, preventing warping and giving it a long life span Our trolley easily folds into a compact size to fit in any standard car. This trolley transports with ease and stores with ease. Simply load your animals, luggage or supplies and roll into your next show with confidence that all your needs are taken care of with our KB-511 series.

The 511 trolley comes in three sizes: one berth, two berth and four berth.

Turn into a grooming table with a grooming arm and clamp. Ask your Sales Representative how you can add a trolley grooming arm and clamp to your order.

Model suffix:

First letter: N stands for Nylon casters, A for non-pneumatic casters.

Last letter: O stands for one door, T for two doors, F for four doors.

Specification

| Item Number | Mainframe | Mainframe Packing | Height with different wheels(cm) | | Gross Weight | Packing Volume | Description |
|-------------|-----------|-------------------|----------------------------------|---------|--------------|----------------|-------------|
| | Size(cm) | Size(cm) | 4xWheel | 6xWheel | (kg) | (cbm) | |
| KB-511NAO | 93x65x80H | 95x84x16H | 93 | 100 | 17.26 | 0.168 | One Door |
| KB-511NAT | 93x65x80H | 95x84x16H | 93 | 100 | 19.73 | 0.168 | Two Doors |
| KB-511NAF | 93x65x80H | 95x84x16H | 93 | 100 | 23.31 | 0.168 | Four Doors |
| KB-513NAO | 78x54x63H | 80x65x16H | 76 | 83 | 13.50 | 0.118 | One Door |
| KB-513NAT | 78x54x63H | 80x65x16H | 76 | 83 | 15.16 | 0.118 | Two Doors |
| KB-514NAF | 55x44x80H | 58x84x16H | 93 | 100 | 8.5 | 0.078 | Two Doors |

Package Inspection

The manufacturer is not liable for any damage caused by a third party "Transport or Delivery Company". Please thoroughly inspect the outer packaging upon delivery.

Then the unit should be unpacked carefully; all components, accessories and the cages should be inspected for any damage or missing parts. If any damage is evident, the carrier or dealer should be notified immediately.

Installation (KB-511NAF/AAF for Example)

1. Parts List

Note: The number in the brackets is the quantity of the part.



Main body of the trolley (1)



Horizontal divider(2)



Middle vertical divider (1)



Casters(4)




Bolts(8), nuts(8) and 17mm wrench(1)

2. How To Assemble

Note: Before assembly, please put a blanket or something soft down on the ground to avoid scratching.

1. Unfold the main body, with screw holes up (See the picture below).

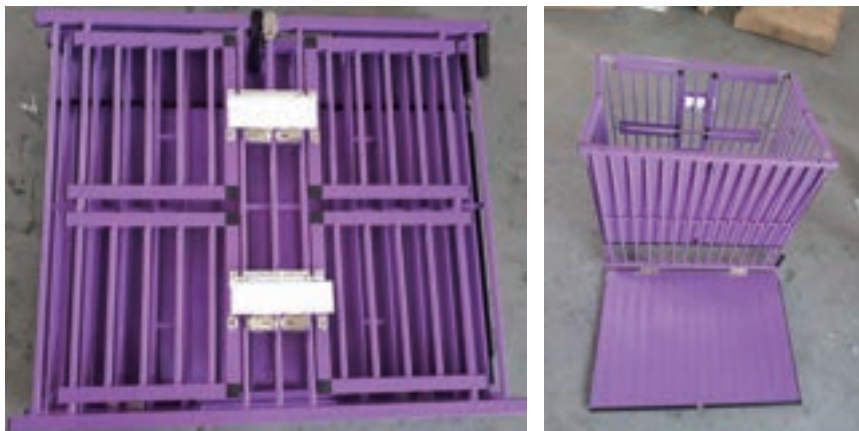


2. Use wrench, bolts and nuts to fix four casters to the screw holes (See the picture below). The fixed casters should be installed on the side far from the handle; the rotating casters on the side near the handle.

Note: Open the door and then fix the casters to the screw holes near the door.



3. Turn over the trolley and make the four wire walls perpendicular to each other (See the picture below).

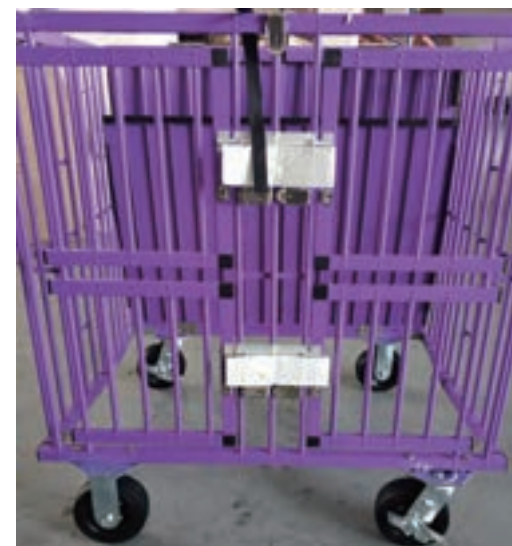

4. The panel inside the main body is the bottom panel. Turn the bottom panel until it is sturdy in place. Press to make sure it is in place (See the picture below).



5. Slide the middle vertical divider into the divider holders (2 on the walls and 2 on the bottom) and make sure that the top edge aligns with the top wall edge (See the picture below).



6. The even side is the top of the horizontal divider, and uneven side is the bottom.
(See the picture below).



7. Diagonally put a horizontal divider in one opening. (See the picture below).




8. Put the divider panel in place and let the two hooks at one side rest over the rails and then the other side. Make sure that the hooks of the divider overlap the rail below (See the picture below). And then install the other divider panel.

Note: If the horizontal divider is not lining up, just turn it around.



9. Turn the top panel to cover the trolley and fasten the top panel security clip.
(See the picture below).

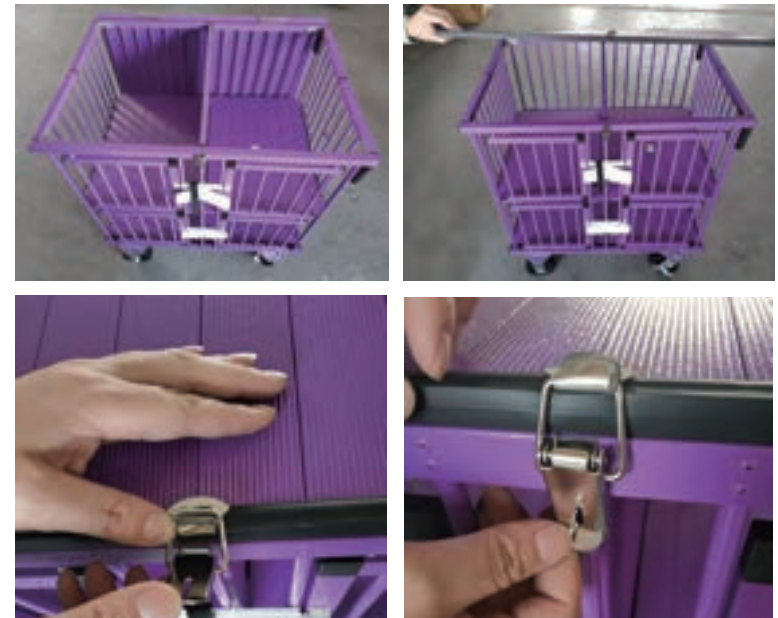

10. Loosen the handle, rotate to horizontal position and fasten it. (See the picture below).



Safety Warning

1. Use only as described in this manual. Use only manufacturer's recommended attachments.
2. DO NOT modify, disassemble or repair.
3. Avoid using the product in dusty, vibrating and wet environment and in chemical storage place.
4. Avoid using the cage on uneven or soft surface.

Maintenance

In between usages, the trolley should be sterilized thoroughly and clean with a soft cloth or sponge using a mild cleaning agent.

Service Support

Contact us if you cannot solve your problem with this manual.

Dallas
11307 Indian Trail, Dallas, Texas 75229, USA.
Tel: 1 469 930 6359
Web: www.aeoluspet.com

Shanghai
Floor 5, Building 6, No. 675, Zhujin Road, Songjiang District, Shanghai, China.
Tel: +86-21-67632060, 67632364

Warranty

Each Aeolus product has a 1 year limited warranty. This warranty covers the cost of parts and repairs done by Aeolus International's Technician Team. Your warranty is only valid when accompanied by your sales receipt or proof of purchase date. This warranty coverage excludes lost items or destroyed items. This warranty does not cover the shipping costs associated with your repair or replacement items. To start a product repair or parts replacement claim for your product, please contact us at info@AEOLUSpet.com or call your local Aeolus location.